

**GREENIS®**

POWER BLENDER  
FGR-8880T-1-2-4

**GREENIS®**

---

Ningbo Greenis Home Appliances Co., Ltd  
[www.greenishome.com](http://www.greenishome.com)



FGR-8880T-1



FGR-8880T-2



FGR-8880T-4

# WELCOME

- To ensure that Greenis blender is in proper condition and you can make the most out of it in years ahead, please take the time to read through the user manual for proper use and better maintenance.
- All content in this manual is for reference only and if you find any information unspecified please inform us for supplementing purpose in next edition. Its design, workings and accessories are subject to change without warning due to continual product development.
- We hope you enjoy the experience with Greenis as it helps you embark on a journey to richer nutrition and better health!

## TABLE OF CONTENTS

<b>01</b>	Welcome
<b>02-03</b>	Safety Precautions
<b>04-05</b>	Product Components
<b>06-07</b>	How to Use It
<b>08</b>	Definitions of Buttons under DIY Editing Mode / How to Self-program a DIY Recipe
<b>09</b>	Precautions on Programming Steps of Recipes
<b>10</b>	Criteria on Ingredients for DIY Recipes
<b>11-12</b>	Use Precautions
<b>13</b>	Cleaning & Maintenance
<b>14</b>	Product Safety Instructions
<b>15</b>	Troubleshooting
<b>16</b>	What's in the Box/Product Specifications

## SAFETY PRECAUTIONS

### Important Notice:

**To ensure safety please read through the manual before using and keep the manual where it is easily accessible. This product is intended for household use only and please follow instructions of use and assembly in the manual.**

- Please ensure the current, voltage and frequency are in accordance with the standard in your country.
  1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
  2. Children should be supervised when they use the appliance and kept from playing with it.
- To avoid danger of electric shock, please DO NOT immerse the motor base in water (or any other liquid) or pour water onto the machine.
- Please unplug the machine if it is to be in long-time disuse. Unplug the machine before assembling or disassembling it.
- DO NOT operate the machine if experiencing any malfunction of power cord, power plug or in other forms. Please contact point of sales (local retailer or distributor) as soon as possible.
- It may cause fire, electric shock or human injury if using unauthorized parts & accessories or refitting machine without authorization.
- DO NOT leave the machine unattended when it is in use.
- When using the machine please ensure water or any other liquid in the jar does not exceed maximum scale marked on the jar surface.
- DO NOT operate the machine with no ingredient or water inside the jar.
- Please keep the machine away from intense heat. DO NOT place it on a cloth in case of damage to parts.
- This product is intended for indoor use only.
- DO NOT use the appliance for more than 30 minutes continuously as the motor may burn out; use it again until the appliance has cooled down. (To prolong the service life of the product, please pause for 45 minutes to let the motor cool down after the use.)

# SAFETY PRECAUTIONS

- Be careful when handling the sharp cutting blades, emptying the jar and during cleaning.
- Be careful if hot liquid is poured into or blender as it can be ejected out of the appliance due to a sudden steaming.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Please secure the lid and measuring cup in place before use. Do secure the lid when making hot drinks (soups) and start with low speed as otherwise high speed may lead to liquids splashing to cause injuries.
- The motor will automatically stop when encountering work overload as the interior temperature detection system is activated to protect the machine from risk of burning out. It can only get back to work after cooling off for 45 minutes.
- The product is fitted with sharp blades. Please be careful when cleaning. Do avoid contact with any moving part.
- The product is fitted with tamper and please ensure you use the tamper when the lid is secured on the jar.
- DO NOT place any other implement like spoons, forks and knives into the jar as they may cause damage to blades and other parts.




**Warning!**  
Electric Shock !

DO NOT use plug adapter or extension cord.




**Attention:** Failure to follow safety and use instructions shall void the product warranty and may cause severe damages or injuries.

# PRODUCT COMPONENTS

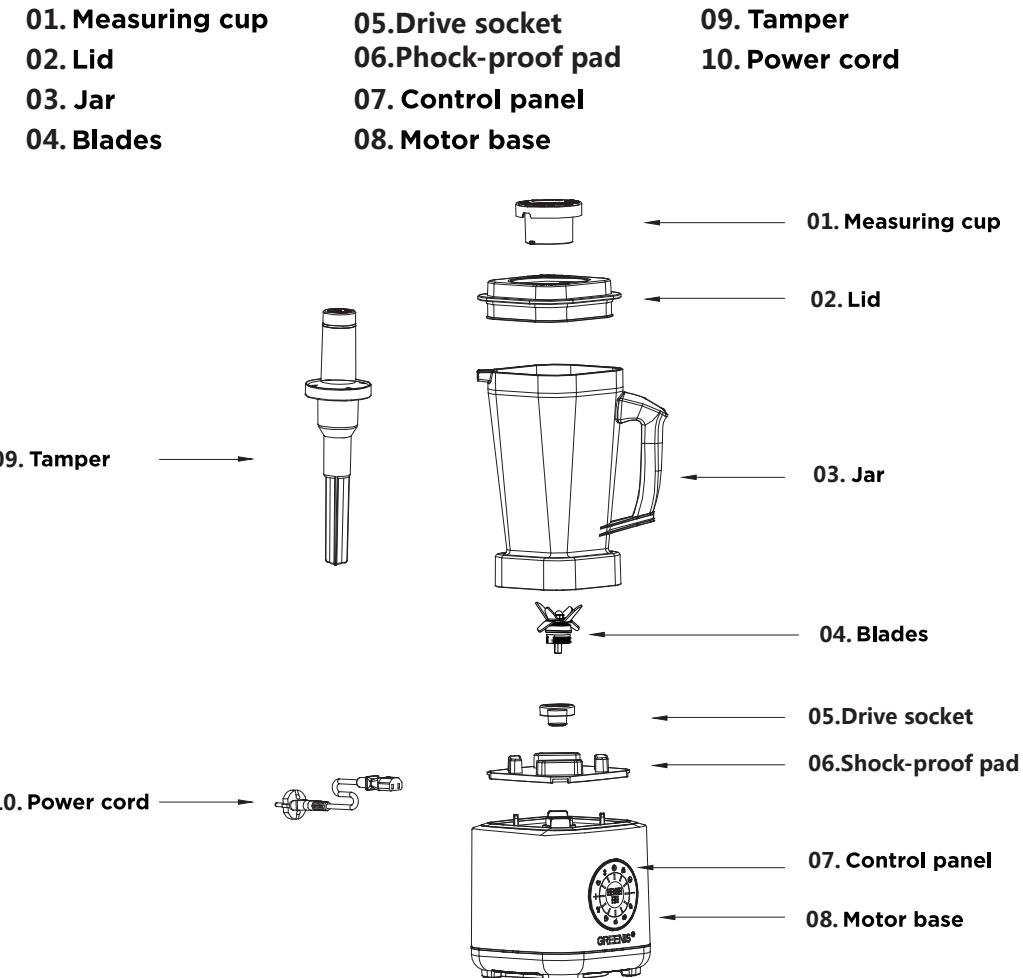

# PRODUCT COMPONENTS

## Control Panel

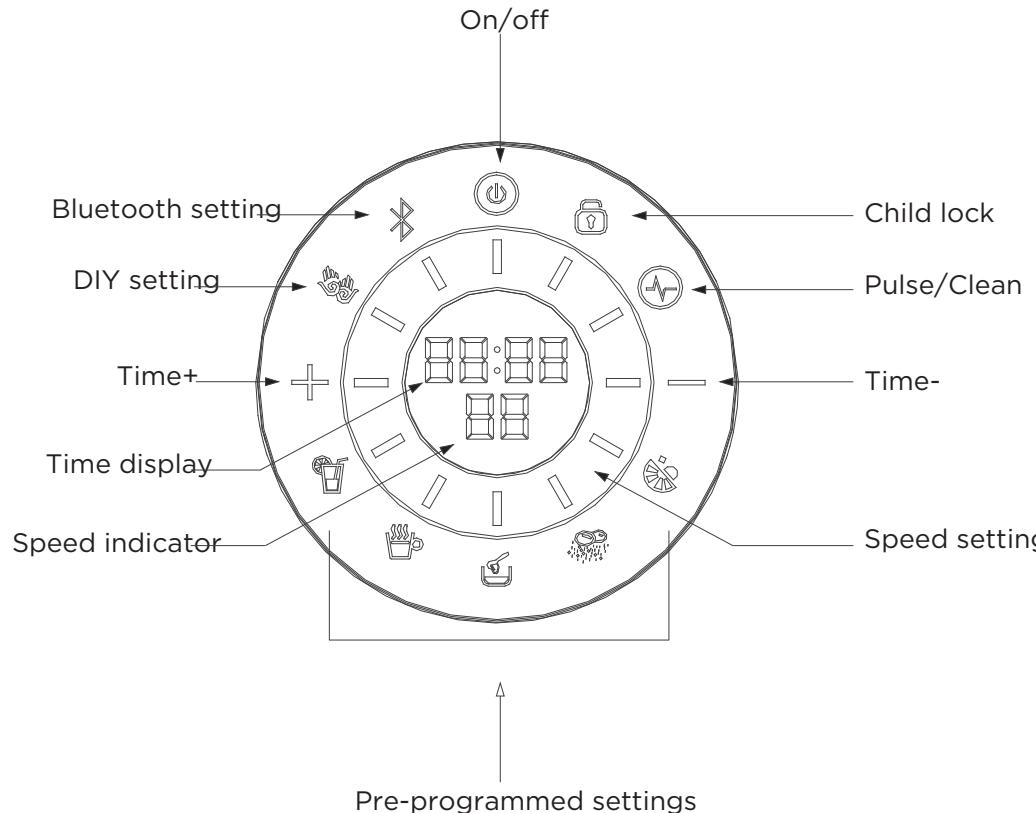

# HOW TO USE IT

## Child Lock “ ”

- The “Child Lock” light will be flickering when the touch control panel is locked to prevent unintended operations.
- Hold “Child Lock” button for 3 seconds to unlock the touch control panel.
- Then hold “Child lock” button for 3 seconds to lock touch control panel.
- The control panel will get automatically locked if without being operated for 1 minute.

## Start “ ”

- Tap Start/Stop button to start or stop cycles.

## Bluetooth “ ”

- The Bluetooth function will only work when connected to mobile phone.
- The Bluetooth icon will be flashing before connection and be normally on during connection.
- Please refer to separate Bluetooth instruction card for detailed user information.
- Hold “Bluetooth” button for 3 seconds to turn off Bluetooth function.
- Then hold “Bluetooth” button for 3 seconds to turn on Bluetooth function.

**Tips:** Bluetooth connectivity for app control is currently optional. Therefore other than Bluetooth option is Ice Cubes program in place.

## Speed control “ ”

- It has 12 variable speeds which are indicated by indicator lights(touch icons) circling around the LCD display. Each indicator light corresponds to the working speed from 1-12 by touching icons to select speed.

# HOW TO USE IT

## Pre-programmed Cycles


Unlock “Child lock” and select desired pre-programmed cycle. Tapping “” the unit will start working as per selected cycle and the time display on touch control panel will show count-down time. The machine will automatically stop once the count-down time ticks to zero and the cycle is completed.

(Tap “” to stop during the process.)

Icon	Cycle	Recipe
 / 	<b>Ice Cubes</b>	9-12 Ice cubes
	<b>Smoothie</b>	150g Fresh sliced pineapple 500g Ice grains 300ml Pineapple juice
	<b>Hot drinks</b>	150 g soaked soybeans (for better flavour soaked in boiling water for 0.5 h in advance)
	<b>Sauce</b>	500 g Salted peanuts (tamper required)
	<b>Grind</b>	450 g Dry corn (maize) (The jar should be dry and waterless when grinding)
	<b>Juice</b>	1/4 Cucumber 1 Celery 1 Apple 600 ml water 9 Ice cube

**Tips:** Bluetooth connectivity for app control is currently optional. Therefore other than Bluetooth option is Ice Cubes program in place.

## DEFINITIONS OF BUTTONS UNDER DIY EDITING MODE

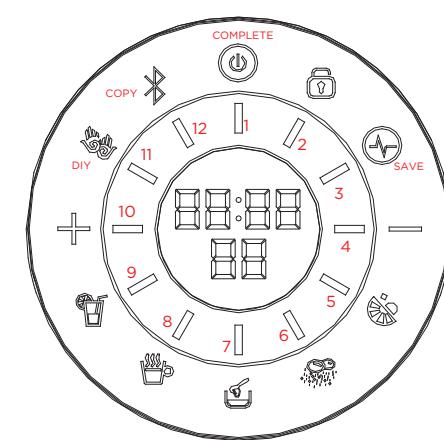

## HOW TO SELF-PROGRAM & RUN A DIY RECIPE:

- A recipe program normally consists of several steps to which individual speed and time is corresponded. Tap and hold DIY button for 2 seconds to enter editing mode whilst the display shows “DIY”. To edit 1st step(while display shows “S1”). Tap “time+” or “time-” to set desired duration of time. Select desired speed by tapping corresponding speed icon. Tap “” button to save the 1st step whilst display shows “S. 01” to indicate success of step 1 being programmed. Moving to the following steps, such operation method applies to every step of the way. Each step (S1, S2, S3...) must be saved by tapping “” button. The recipe program is composed of no more than 18 steps.
- After all steps are programmed into DIY cycle, tap COMPLETE “” to save the entire program. Then the machine will stand by with DIY cycle automatically selected. Tap power button “” to run the cycle which has been programmed.
- As other buttons of cycles, tap DIY and power button “” to start running DIY cycle.

## PRECAUTIONS ON PROGRAMMING STEPS OF RECIPE:

- It is essential to tap SAVE “  ” button to save current step when programming each step.
- If a program is merely 1 step,tapping COMPLETE “  ” will save the program which eliminates the use of SAVE“  ”button.
- A recipe that has been validly programmed will replace previous DIY program.
- The machine may beep to indicate of failure if any programming goes wrong. Such failure does not affect or replace existing recipe program.
- To ensure its long service life, the machine is preset at the workload of no more than 30 minutes working continuously.
- The machine will verify the duration of new program is no longer than 15 minutes. Otherwise programming fails whilst the machine beeps twice to indicate failure.
- A recipe program is composed of 18 steps at most. The display will show “FULL” to indicate the full limit for steps.(The 18th step is still programmable but adding extra step is impossible)
- For easier use,the 1st step is forbidden to be at speed “0”. (A failure to set speed other than “0” will disable 1st step to be saved.)
- Default recipe for DIY button is ICE CRUSH.
- If the last step fails to be saved without tapping SAVE “  ” button when programming multiple steps, the program will only include previous steps excluding the last step after tapping COMPLETE “  ”.
- Under DIY editing mode a continuous no-operation for 30 seconds will dim the display. A continuous no-operation for 3 minutes will exit DIY editing mode. The steps that have been programmed will not be saved.
- Under DIY editing mode removing the jar will turn off the machine meanwhile exiting editing mode.
- A valid DIY program will be stored into memory of the machine and last for 20 years whether machine is connected to power or not.
- Repeatable read-write cycles for DIY programming are 100,000 times.

## CRITERIA ON INGREDIENTS FOR DIY RECIPE:

- (1) For speed 1-6 applicable ingredients are roots and leaves of vegetables, fruits and the like. The adequate proportion for ingredients and water is 2:3. Ensure that the volume does not exceed maximum scale 2000 ml of the jar.
- (2) For speed 7-12 applicable ingredients are ice cubes no more than 200 ml (individual ice cube size no larger than 20\*20 mm) or nuts no more than 250 g. Water should not be added into the jar when grinding nuts.
- **Tips:** DIY program is suitable for fruit and vegetables only. It does not apply to overly thick ingredients. The DIY program is composed of no more than 18 steps.The continuous working time for DIY program is no longer than 15 minutes.
- **Attention:** above criteria apply for ingredients added into the jar under Pulse mode or when rotating dial to operate the machine.

## USE PRECAUTIONS



### Warning!

#### **Rotating Blades Can Cause Severe Injury.**

- DO NOT put hands, spatulas, utensils, etc. into the jar while the blender is running or while the jar is on the base.
- Different tampers and lids match with different jar styles, types and sizes. Use the tamper that is supplied with your jar and blender.

## Tamper Tool IMPORTANT!

- Make sure the lid is securely placed on the jar if tamper is to be used. Shut down the blender before placing tamper through the hole of lid, in case of food splashing to cause injuries.
- DO NOT use other implements to replace the tamper if it is missing, which may otherwise cause injuries. Please contact local dealer to purchase replacement part.

### About measuring cup, lid and seal ring:

- Place the measuring cup onto the lid (place measuring cup through the central opening of lid and twist clockwise to fasten) and place the lid onto the jar securely.
- Make sure that the machine is not running before putting the tamper.
- The seal ring around the lid is detachable. When cleaning remove seal ring from the lid to thoroughly clean away residues stuck inside the seal ring and the lid.

# USE PRECAUTIONS

### Other important precautions:

- Stirring ingredient that is fermentative or dry (little water content) for a long time may cause over-heating and thus trigger overheating protection mechanism built inside the motor. Therefore please start with low speed and change to high speed if the ingredients are thick or rather dry. If it's still difficult to stir, please shut down the power, reduce amount of ingredients or add liquid to decrease viscosity.
- The motor will stop working when overheated. Unplug the blender and cool down the motor for 45 minutes in a drafty place or in front of a fan.
- During the operation, make sure the lid and measuring cup are fastened tightly, in case the food inside would splash out and cause injuries.
- During the operation, DO NOT put hand, any tool (like spoon), or other hard object into the blender jar, in case of any danger or damage.

### Other important precautions:

- When making hot drinks (like soybean milk, rice paste, pottage, etc.), make sure the lid and measuring cup are fastened tightly, and set the speed from low speed to high speed.
- When making sauces (like almond paste, jam, peanut butter or sesame paste, etc.), stuffing, or shell grains, the volume of ingredients must be among 3 cups to 5 cups; DO NOT operate continuously for a long time, in case there will be scorched flavor because of overheating. Too many ingredients may also cause overload, triggering motor's over-temperature protection.
- Please place liquid and soft ingredients first before hard ones like ice cubes.
- DO NOT remove the jar until the blades come to a full stop. Otherwise it may cause damages to drive socket.
- Please stop the machine once smelling any scorching smell. It may be caused by overload of ingredients or the fact blades and drive socket are not fully engaged.
- It is recommended to operate the machine no more than 30 minutes at a time.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved
- Children shall not play with the appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# CLEANING & MAINTENANCE

**Please ensure the blender is unplugged before cleaning or maintenance.**

- DO NOT immerse motor base or power cords into water or any other liquid.
- Use soft cloth or sponge to wipe clean the surface of jar. Remove the measuring cup and seal ring before proceeding to cleaning.
- Rinse the jar with clean water after each use. Or you can add 2 cups of clean water (1 L) into the jar, secure the lid and press rotary dial without release “” to clean.
- Lay down the jar horizontally in a drafty place or place it upside down to let it dry naturally. Do not immerse it entirely in water.
- DO NOT rinse motor base with clean water. Use soft cloth to clean instead.

#### Attention:

When drying the machine by placing it in an upside-down position, please wipe away leftover water at the bottom of the jar. Keep it away from the sink in case of any water dripping into the bottom of the jar and potentially rusting interior key components like metal bearing.

#### Warm Prompts:


To thoroughly clean the inside of the jar and leftover dirt on the blades and ensure durability of jar and blades, it is recommended to add some clean water and lemon into jar, secure the lid and press button “PULSE” to quick clean for 2-3 times. Pour away water and repeat the step.

#### Simple cleaning:

##### Attention: DO NOT immerse jar into water

1. Add 750 ml clean water and 1-2 lemon slices, tap button “” (running for 1 min 56s).
2. Pour away dirty water and repeat step no.1.
3. Pour away dirty water and wipe it clean with cloth. Dry the jar in a drafty place.

# PRODUCT SAFETY INSTRUCTIONS

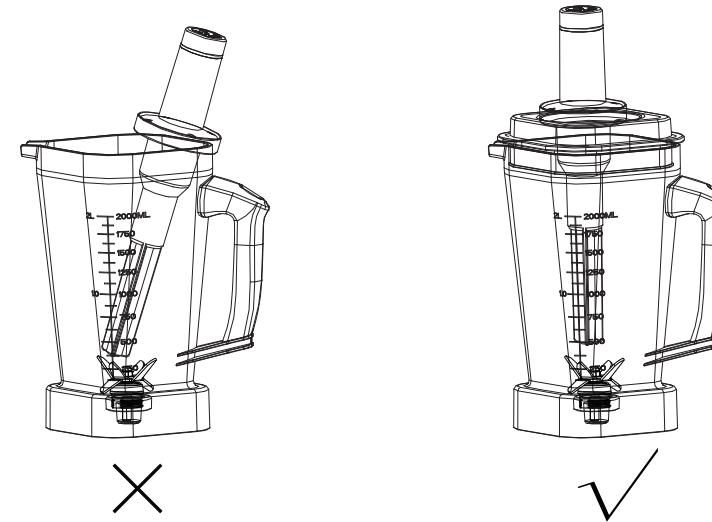

**Correct way of using tamper**

# TROUBLESHOOTING

Fault	Possible cause	Possible solution
The unit does not work after being connected to power (no display on the control panel).	The jar is not securely placed on the motor base or the lid is not in place.	Remove the jar or lid and place them properly.
Bluetooth cannot be connected.	The cell phone's Bluetooth is not activated or it is out of effective distance.	1. Try to open cell phone's Bluetooth again. 2. Place the cell phone as near as within 3 meters from the machine.
The machine suddenly stops during the operation.	The lid is blown out by the food.	Place the lid back in position and restart the machine.
Abnormal noise during the operation.	1. Either the jar or mat is not correctly assembled. 2. Foreign objects are stuck on the drive socket.	1. Switch off the machine and remove the jar. Check if there are any foreign objects on the mat. Place the jar back in position again. 2. Remove the measuring cup from the lid and a 6-cm-wide opening is revealed. Use the tamper to stir through the opening.
All lights are on while touch buttons do not work.	1. Caused by capacitance interference of touch panel. 2. Tap any two of buttons simultaneously.	1. Unplug the machine. Plug again and tap "On/Off" button to restart. 2. Release one button (only touching one button at a time).

## Attention:

Above are general problems users may encounter and possible solutions they can adopt. For other problems with the machine, please contact local after-sales for repair purpose. DO NOT open the machine and repair by yourself.

# WHAT'S IN THE BOX

Motor base	1 unit
Jar set	1 set
Lid	1 unit
Measuring cup	1 unit
Tamper	1 unit
Power cord with plug	1 unit
Seal ring(Spare)	1 unit
User manual with/without other printings	1 unit

# PRODUCT SPECIFICATIONS

Model	FGR-8880T
Voltage/Frequency	See rating label on base of product
Rated power	1400 W
Product Dimensions	18.5*19*49cm