



Ningbo Greenis Home Appliances Co., Ltd
Address: No. 16 Building, 518 Xinmei Road,
Yinzhou District, Ningbo Zhejiang
www.greenis.com

GREENIS®

Multifunctional Breakfast Maker
G-301
User Instruction Manual

To ensure safety please read through the manual before using
and keep the manual where it is easily accessible.

GREENIS®

Dear user, thanks for choosing and trusting Greenis multifunctional breakfast maker. To ensure that Greenis multifunctional breakfast maker is in proper condition and you can make healthy and delicious foods, please take the time to read through the user manual for proper use and better maintenance.

Product Specifications

Product Model No.	G-301	
Product Size	150x260x88mm	
Product Weight	1150g	
Product Weight	Rated Voltage	220V~
	Rated Frequency	50Hz
	Rated Power	650W
	Baking Pan Size	145x145mm
Packing Details	Whole Machine	1
	User Manual	1
	Certificate	1

Product Specifications

⚠ Attention: Pay attention to the risks that could result in injury to people or damage to items.


- This product is intended for household use only, please do not use for other purposes.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised when they use the appliance and kept from playing with it.
- To prevent children from playing with it and risking choking, please dispose of the plastic bag in the trash immediately after opening the package.
- Before connecting the product to the power supply, please check that it is compatible with the local power. Higher or lower voltages may damage components or affect the normal operation of the product. To avoid damage, it is recommended to use a voltage regulator.
- This product is a Class I electrical appliance, to avoid leakage accidents, please ensure that the grounding is good before use.
- To prevent overheating and burning out of the component due to poor contact, the plug must be fully inserted into the receptacle. A grounded receptacle of 10A or more must be used separately, to avoid a short circuit or fire.
- Do not operate the product with an external timer or separate remote control system to prevent short-circuiting, spontaneous combustion, or other mishaps.
- Do not use this product for boiling water, making porridge, frying, etc. or it may cause short circuit and damage the components.
- To avoid electric shock, it is forbidden to plug or unplug the power plug with wet hands.
- To prevent fire, do not use this product on flammable materials such as carpet, towels, plastic, paper, etc.
- To avoid electric shock, fire, slipping and other injuries and property damage, do not use this product on unstable, humid, high-temperature, smooth, heat-resistant worktops.

- To prevent component damage, malfunction or fire, keep this product away from high temperature, strong magnetic, flammable and explosive gases (such as natural gas, methane, etc.). There should be enough space around the product to keep at least 10cm away from surrounding objects.
- Do not use the product under or near combustible materials such as curtains, closets, etc. to prevent fires.
- Do not leave this product unattended as it may scorch the ingredients and cause a fire.
- To prevent electrical leakage, which can cause electrical shock or fire, make sure that the power cord does not come into contact with sharp or rough edges, other protruding sharp objects, or objects with high surface heat.
- To prevent overheating causing baking pan cracking, spontaneous combustion, fever, baking pan deformation, etc., this product should not be burned empty for a long time (without ingredients in it), in order to avoid injury accidents and property damage.
- When opening the lid, do not use too much force, lest the top baking pan bounce back and cause burns or bruises.
- Do not place any bagged, canned or bottled items on the product or in the baking pan while the product is working, as there is a risk of explosion.
- When using this product, do not put large sharp objects, paper, plastic or other flammable items in the baking pan, as this may cause damage to the components and fire hazards.
- Do not touch the baking pan with your hands while the product is in operation, and before cooling down after use to prevent burns.
- To avoid damaging the product or causing accidental injury, do not scrape the pan with metal or sharp objects while cooking.
- To prevent short-circuiting, electrocution, and risk of personal injury and property damage, wipe up spilled oil promptly and do not allow oil to flow into the product.
- Please be careful of high temperature when taking foods out to avoid burns.
- Do not use knives or metal utensils to cut food on the baking pan; do not scrub the baking pan with metal or coarse objects to avoid damage to the non-stick coating.
- After use, turn off the power, let the machine cool down and then clean the baking pan and surface to prevent residual ingredients, grease, etc. from smoking or catching fire during baking.
- After using this product, there is still residual heat on the surface of the baking pan, please cool down and then wash to prevent burns.
- When the product is not in use, when cleaning or moving the product, or when the product malfunctions, be sure to unplug it to prevent electrical leakage.
- When unplugging, hold the plug and pull it out, do not pull or twist the power cord to prevent damage to the power cord and the risk of leakage.
- If the power cord is damaged, in order to avoid danger, it must be replaced by a professional from the manufacturer, its service department, or a similar department.
- Do not rinse or soak the product in water or other liquids, and do not spray water on it to avoid damage to the components or leakage of electricity.
- If the product is faulty or damaged, please stop using it and send it to manufacturer, its service agent or similarly qualified persons, do not repair it yourself to avoid danger.
- When disposing of this product, please cut the power cord and take it to a qualified department for collection and disposal.

Tips and Hints:

- It is normal for a small amount of fumes to evaporate when the product is used for the first time. Due to temperature changes within the machine, it is normal that this product makes a "clicking" sound when parts contract or expand during use.

| Product Components

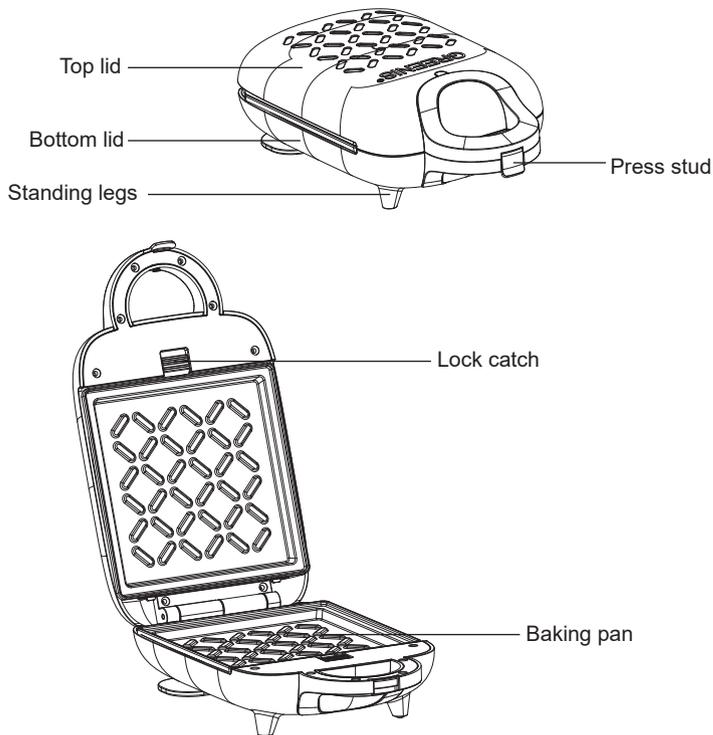

| How To Use

1. Before using for the first time, wipe the baking pan with a damp cloth and rub a little cooking oil on the top and bottom pans.

2. Product preheating

- Plug in the power supply and allow the machine to preheat.

3. Cooking foods

- After the machine has been preheated for two minutes, release the press stud, open the top lid, place the ingredients in the baking pan, close the top lid, and snap on the press stud if needed. Choose different cooking times for different ingredients, refer to the table below.
- The preheat time can be determined by experience, and you can start cooking without waiting for the heat indicator to turn off.

Food Processing Time Reference Table

Food Name	Time (Min)
Egg/thin pancake/omelette/pancake/Chinese pancake/green onion pancake	2-5
Sandwich	4-5


Tip: The time shown in the above table is for reference only.

The baking time depends on the voltage, temperature, food materials, hardness, softness, size, etc. The customary name for food varies from place to place, so it can be reasonably adjusted according to the actual situation.

4. After use, disconnect the power supply, unplug the power plug, cool it for a few minutes, then wipe it off with a damp cloth, but clean it with a detergent when not in use for a long time.

| How to Remove the Baking Pan

With the machine open, push the lock catch back and remove the baking pan when it pops up (see below). When the pan pops up, pull up to remove the pan; the reverse operation is the way to install the pan.

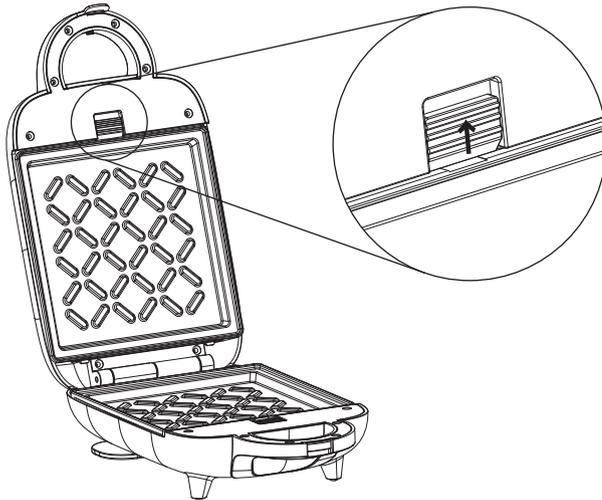

Tips & Tricks:

- To ensure the health of your food, do not reuse cooked oil.
- For consistent results on both the top and bottom of the food, it is recommended to flip the food at the right time during the process.

| Cleaning & Maintenance

1. Turn off the power and unplug the power plug before cleaning.
2. After the baking pan has cooled, remove the pan from the oven and wash it. Do not wipe the baking pan with rough objects such as steel wool to prevent damage to the coating. If stored for a long period of time, use a cleaner to clean it.
3. Do not immerse the machine in water for cleaning.
4. After cleaning, let the product air dry and store it in a cool, dry place.

| Fault Analysis & Troubleshooting

Failure Performance	Cause	Solution	
The power indicator does not light up.	Baking pans did not get hot.	The power is not on.	Check the plug, socket, and power line are in good condition, and plug in place.
	Baking pans get hot.	The internal wire is broke.	Send the machine to the designated service department for repair.
		The power switch is damaged.	
		The heating tube is damaged.	
		The thermostat is broken.	
	The thermal fuse is damaged.		
The heat indicator is always on.	The internal indicator light of the power switch is damaged.		
	The indicator wire inside the power switch is broken.		
	The thermostat is damaged.		

| How to Remove the Baking Pan

- If the problem cannot be solved, do not disassemble the machine yourself at home. Please send it to your local service department for repair, or leave a message on Greenis' official website or Facebook account.
- The above information is subject to change without prior notice if the model or parts do not conform to the physical object.

| Food Contact Materials Information Sheet

- Use this product in accordance with the requirements in the manual.
- This product conforms to the requirements of the corresponding Chinese national food safety standards, food contact materials and their compliance with the standards are described below.

Food Contact Materials		Implementation Standards	Conformity to Standards	Note
Baking pan	Polytetrafluoroethylene (PTFE) Aluminum ADC12 Substrates	GB4806.10-2016	Conform with it	

| The Marking Table of Restricted Use of Hazardous Substances

Names & contents of hazardous substances in the product 						
Component Name	Hazardous substances					
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr(VI))	Polybrominated biphenyl (PBB)	Polybrominated diphenyl ethers(PBDE)
Rubber parts	○	○	○	○	○	○
Metal parts	○	○	○	○	○	○
Electrical parts	×	○	○	○	○	○

○ : Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit specified in the standard GB/T26572-2011.

× : Indicates that the amount of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limits specified in the standard GB/T26572-2011 due to limitations of existing technology and processes.